

International Router Configuration for Espresso Windows Bike

If using Espresso pre-configured Router go to procedure 1. If using a router other than a pre-configured Espresso router, proceed to procedure 2.

Procedure 1

1. When using the pre-configured Espresso router please make sure to use the correct power converter. Review installation guide to install pre-configured router.

Procedure 2

1. Connect to port number 4 of the router to the computer (PC), power on the router.
2. Make sure port number 4 is lit on the router.
3. Connect to the router using the **factor default IP address** in the internet address bar and hit enter. Leave the user name blank and tab to password: **admin** hit enter.
4. Go to the Administration Manual and click on the Management tab. Change router password to **funfit** in the password field. Also re-enter **funfit** and press the save setting button.
5. Go to the setup manual, click on basic set up tab.
 - i. Domain name: **EspressoWorld**
 - ii. IP address: **172.16.240.1**
 - iii. Subnet Mask: **255.255.255.0**
 - iv. DHCP server: **On**
 - v. IP pool starting: **40**
 - vi. Maximum # of users: **200**
6. Press saves settings button and click on “Continue”
7. Now unplug the power to the router and wait 10 seconds, next in internet address bar enter <http://172.16.240.1> log in again with a **blank** username and **funfit** as the password.
8. Go to the wireless manual tab and click on the basic wireless setting tab change the following fields.
9. Network mode: **G-only**
10. SSID: **SparkWorld2 (capitalization is important)**
 - i. Standard Channel Field: **11**
 - ii. Broadcast SSID: **On**
11. Click Save settings button and click on “Continue”
12. Click on the “wireless security” tab and make the following changes
 - i. Security mode field: **WPA Personal**
 - ii. Encryption field: **TKIP**
 - iii. Pre-shared Key field: **funfit06**
13. Press “Save settings” button and click on “continue”